


QSI Revolution U Classic SW9 installation


25 Oct 09



ver 1.01

- Once the body is removed from the chassis, unplug the AC/DC pcb from the socket, unscrew the AC/DC pcb from the hood and remove.
- Cut or grind away the two rectangular cab wire holders and the front AC/DC pcb screw mounts as these will interfere with the speaker placement. Add a square of fabric Velcro for the speaker baffle assembly

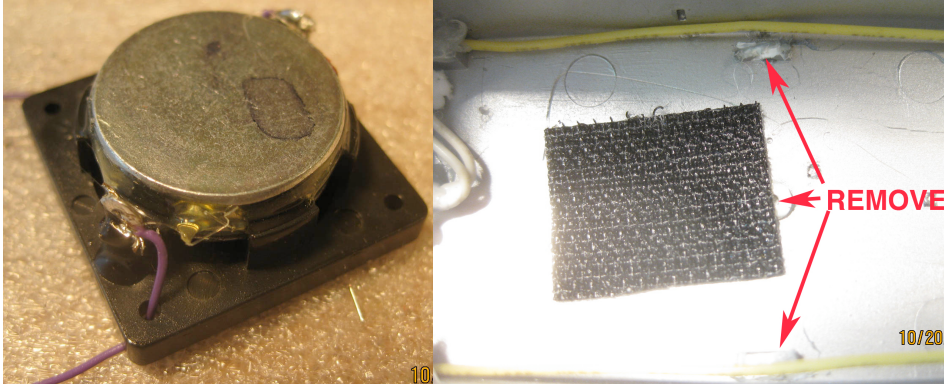

- Tie the QSI NMRA plug into a half hitch threading the two speaker wires into the knot.
- Two speaker wires (purple) are located on the non-8 pin NMRA plug wire harness and are soldered to the high-base speaker. These two purple wires are not polarity dependant. Thread the speaker wires through the two opposing holes in the speaker square frame. Once soldered, place on the speaker baffle and add a square of Velcro hooks to the back of the baffle. This will mount to the inside of the hood close to the front headlight.
- Cut a square of hooks and fuzzy sided Velcro attaching the hooks to the bottom of the QSI pcb, the fuzzy Velcro to the top of the motor.
- Tie the QSI NMRA plug into a half hitch.
- Insert the QSI pcb 8 pin NMRA plug into the SW9 socket.
- Coil the remaining loose wires with small zip ties making sure the blue capacitor sits between the motor and cab.

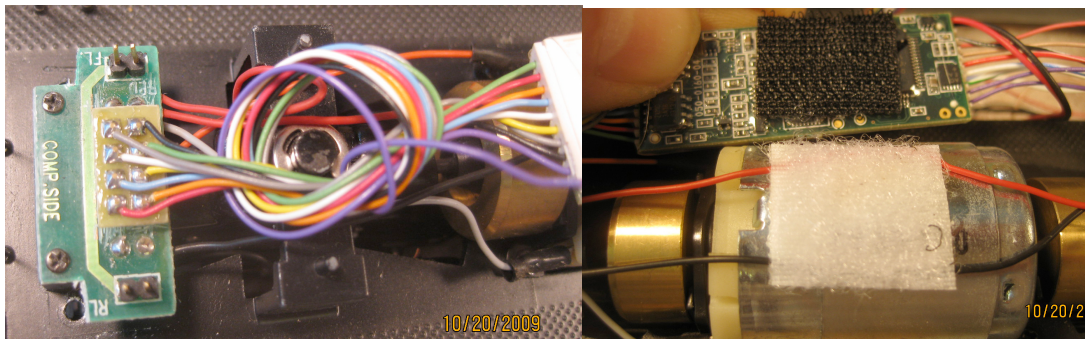

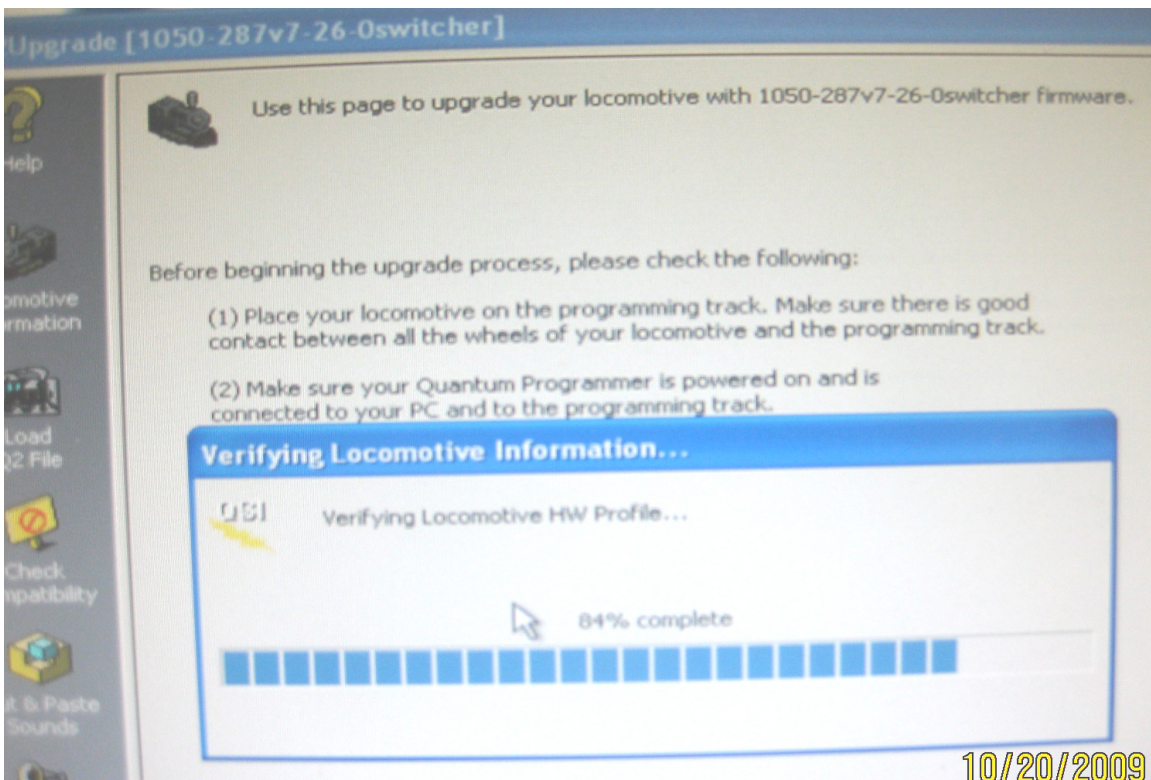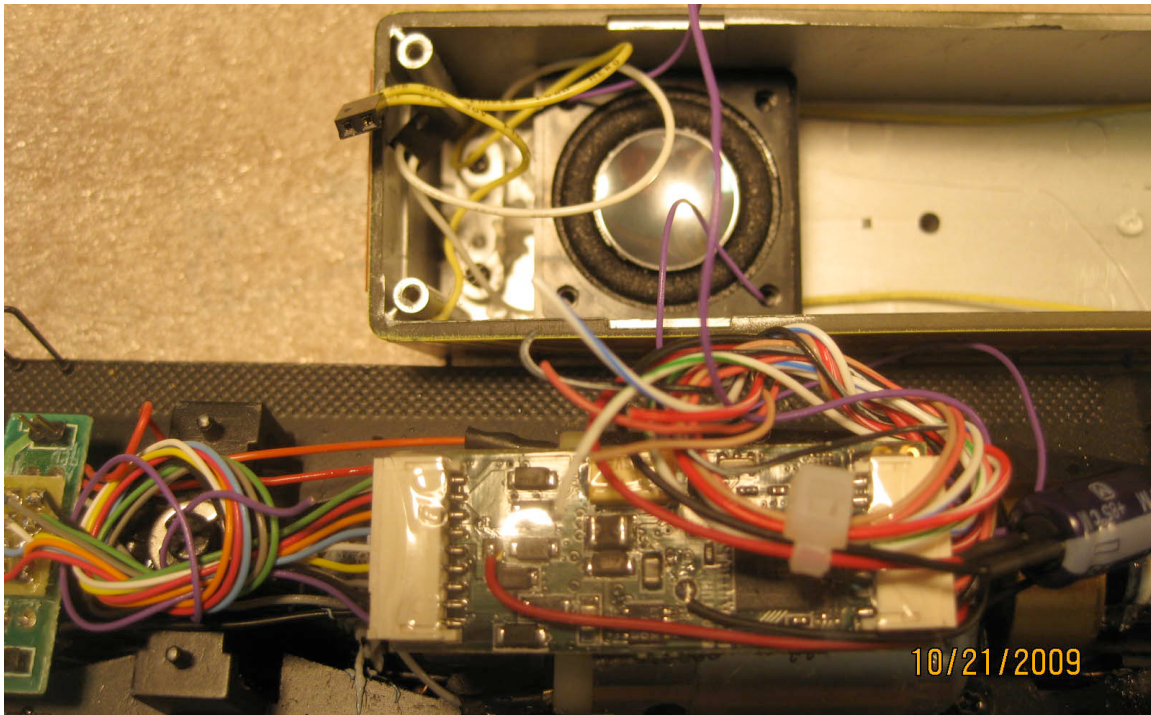

Program the SW9 using the EMD switcher files.

http://www.qsisolutions.com/products/techinfo/revolution/q-revo_codes_diesel.html

Stock file - 1050-287v7-31-0q.2